

# GATWICK AIRFIELD MAP

## Block Diagram

Check AIRDAT for latest version

**ALPHA**



### WORKS PERMITS

All contractors working on the airfield, airside roads, aircraft stands and the manoeuvring areas MUST be in possession of a valid works permit.

Smoking permitted only in designated areas

### Contact Telephone Numbers:

Emergency 222 (from Stand telephone)  
 Emergency 01293 501222 (from a mobile)

ALL airside incidents must be reported via one of the above numbers

Airfield Operations 3090 (from Stand telephone)  
 Airfield Operations 01293 503090 (from a mobile)  
 ATC 01293 601031  
 Engineering Faults 1111 (from Stand telephone)  
 Engineering Faults 01293 501111 (from a mobile)

### ATC Radio Frequencies:

Tower 124.230MHz  
 Ground 121.805MHz  
 Standby (As directed by ATC) 134.230MHz

All vehicles must maintain a Listening Watch with ATC whilst driving on the manoeuvring area

### Maximum Speed Limits:

Airside Roads/Crossings 20 mph (or as locally signed)  
 Interstand Clearways 5 mph  
 Manoeuvring Area 40 mph

### Key:

- A1 Main Runway Holding Point
- N1 Northern Runway Holding Point
- J Taxiway Designation
- 21 Grass Area Number
- VHP-1 Vehicle Holding Point (VHP)