


GATWICK AIRFIELD MAP

Main Runway 08R/26L Operation

Check AIRDAT
for latest version

BRAVO

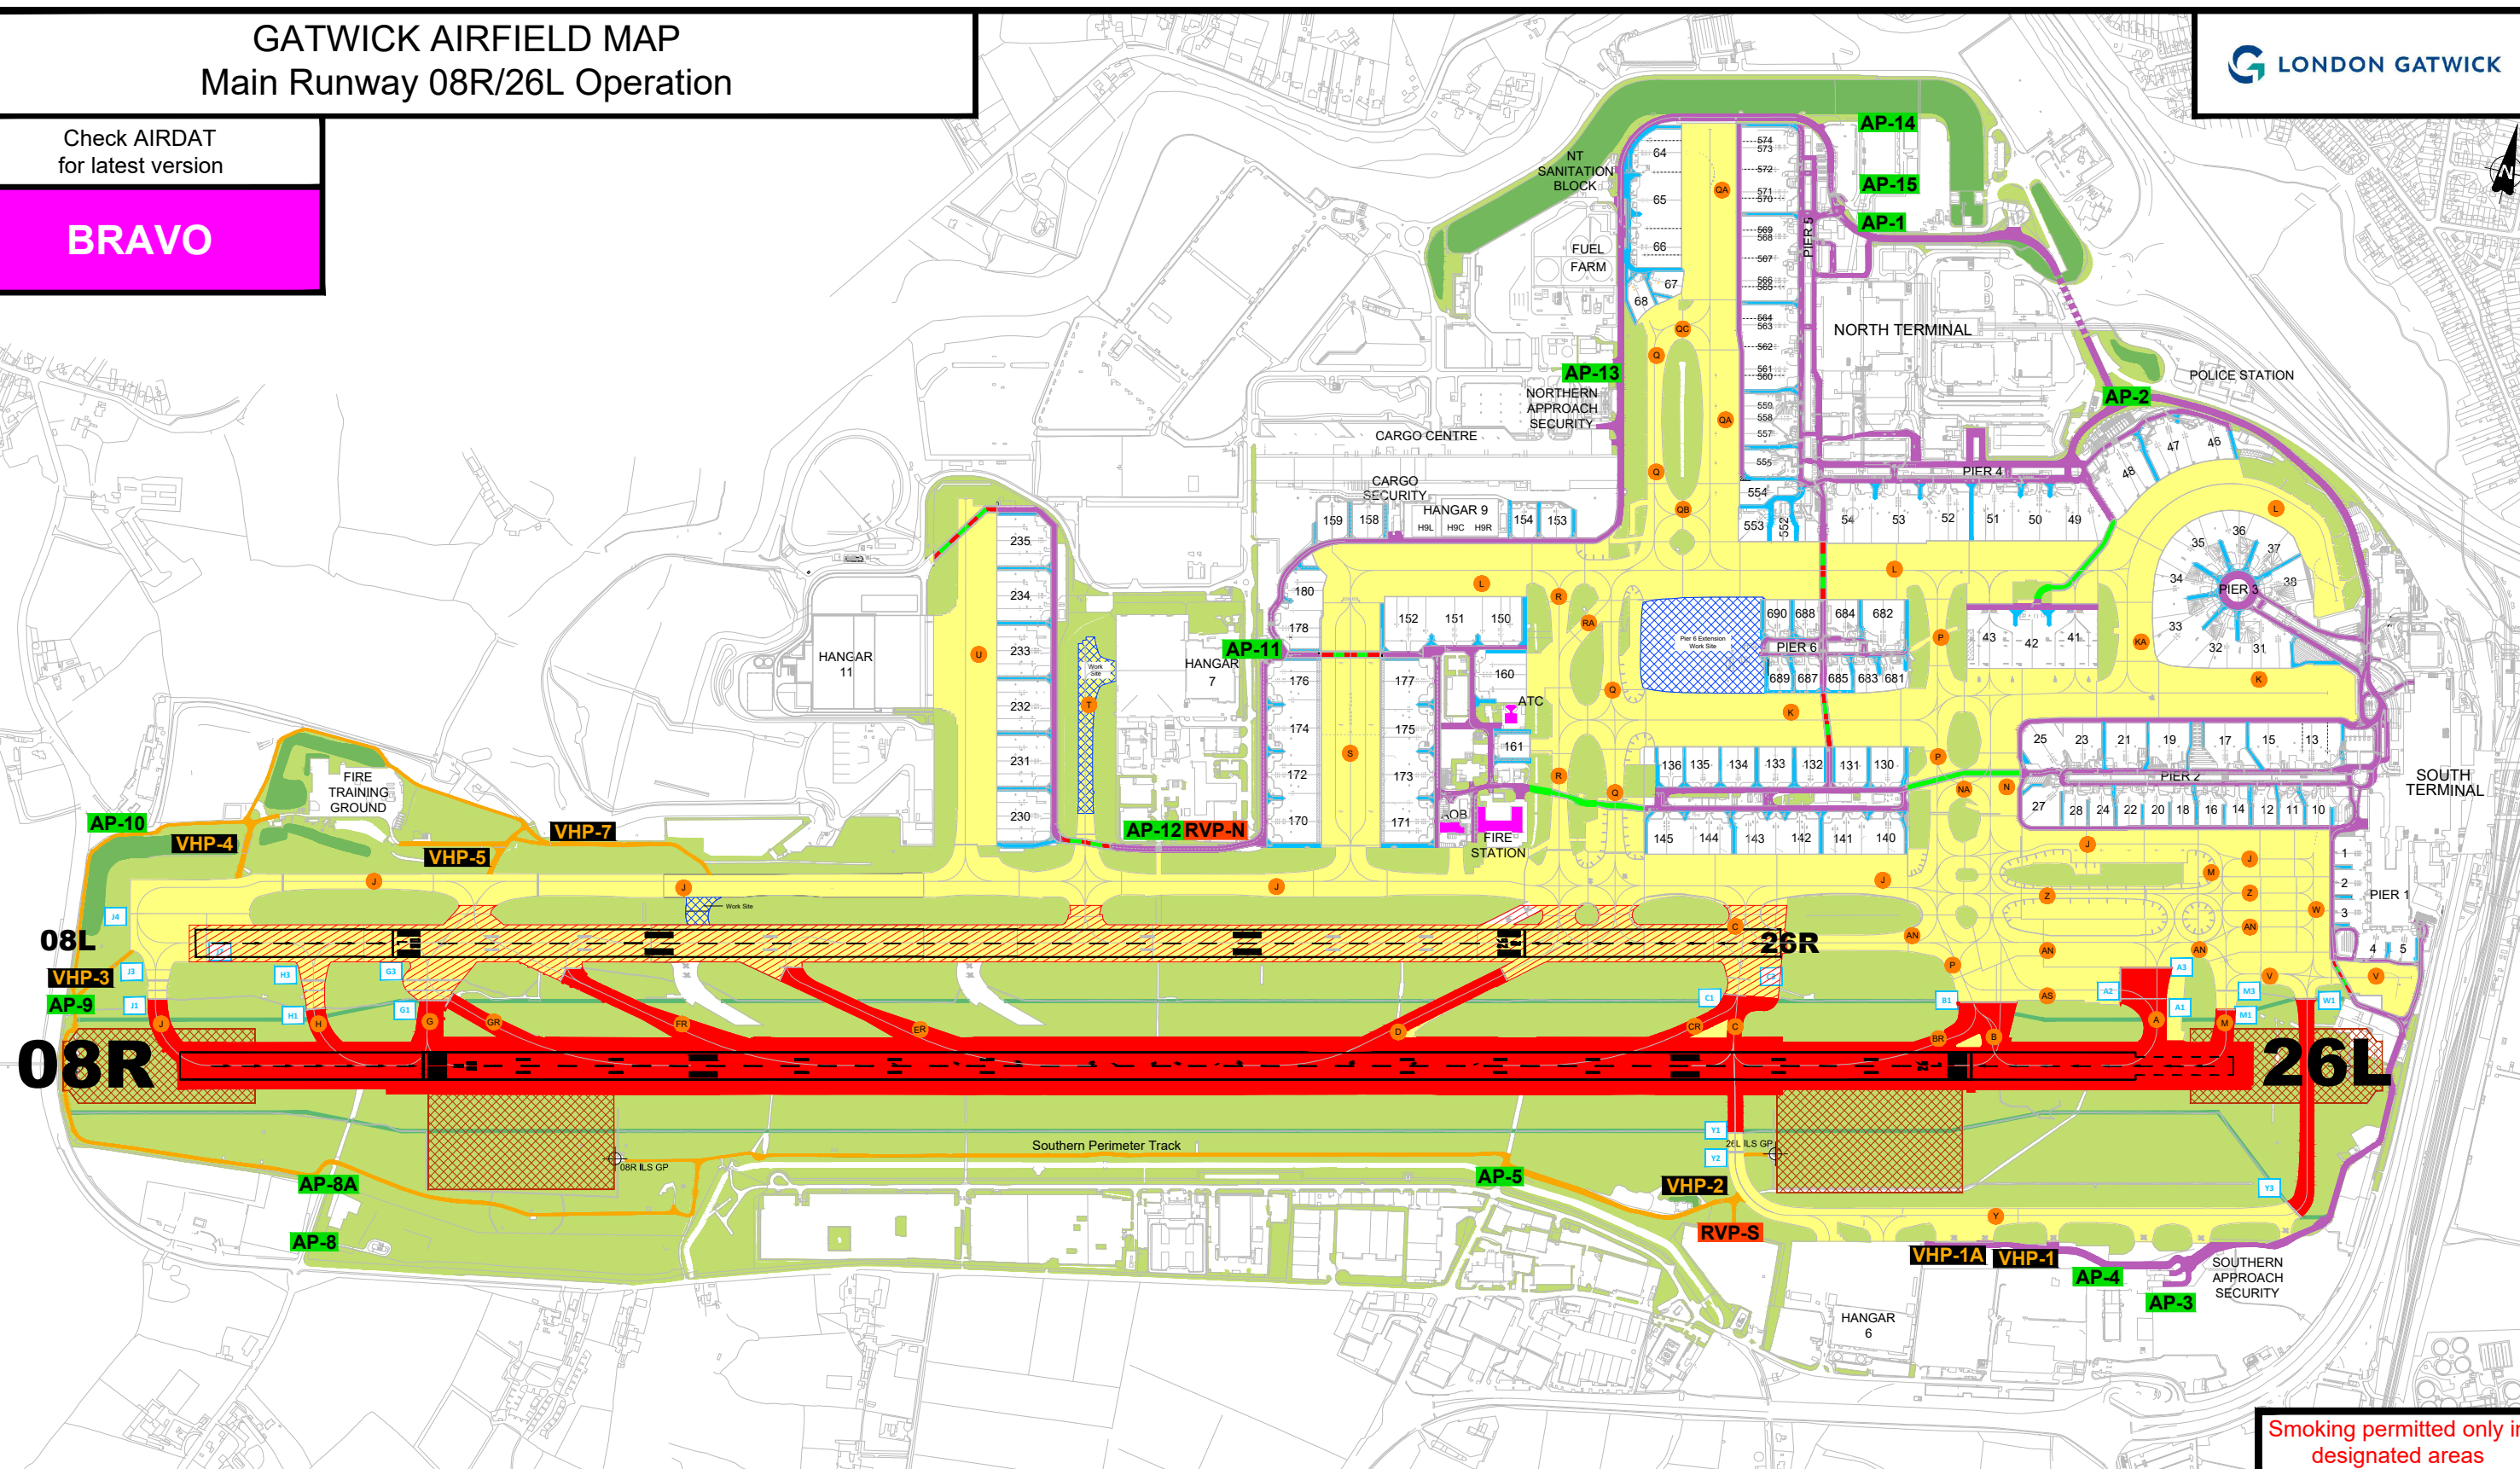

Smoking permitted only in
designated areas

Contact Telephone Numbers:

Emergency 222 (from Stand telephone)
Emergency 01293 501222 (from a mobile)

ALL airside incidents must be reported via one of the above numbers

Airfield Operations 3090 (from Stand telephone)
Airfield Operations 01293 503090 (from a mobile)
ATC 01293 601031
Engineering Faults 1111 (from Stand telephone)
Engineering Faults 01293 501111 (from a mobile)

ATC Radio Frequencies:

Tower 124.230MHz
Ground 121.805MHz
Standby (As directed by ATC) 134.230MHz

All vehicles must maintain a Listening Watch with
ATC whilst driving on the manoeuvring area

Maximum Speed Limits:

Airside Roads/Crossings 20 mph
(or as locally signed)
Interstand Clearways 5 mph
Manoeuvring Area 40 mph

Key:



ILS Critical Areas:
Under no circumstances must anyone enter these
Critical Areas without ATC permission



Main Runway 08R/26L / Yankee Undershoot:
No Free Ranging at any time - Controlled by ATC Tower



Northern Runway 08L/26R:
Only GAL approved vehicles can Free Range on 08L/26R
- Controlled by ATC Ground



Manoeuvring Area:
Only drivers with a valid Manoeuvring Area licence are
permitted to drive on the Manoeuvring Area

Airside (Service) Road

Interstand Clearway

Taxiway Crossing - Controlled

Taxiway Crossing - Semi-Controlled

Airfield Perimeter Track (Max. Speed 20mph)
(Manoeuvring Area Licence Holders Only)

A1 Runway Holding Point

J Taxiway Designation

RVP-S Rendezvous Point (RVP)

AP5 Access Point (AP)

VHP-1 Vehicle Holding Point (VHP)