


GATWICK AIRSIDE ROADS MAP

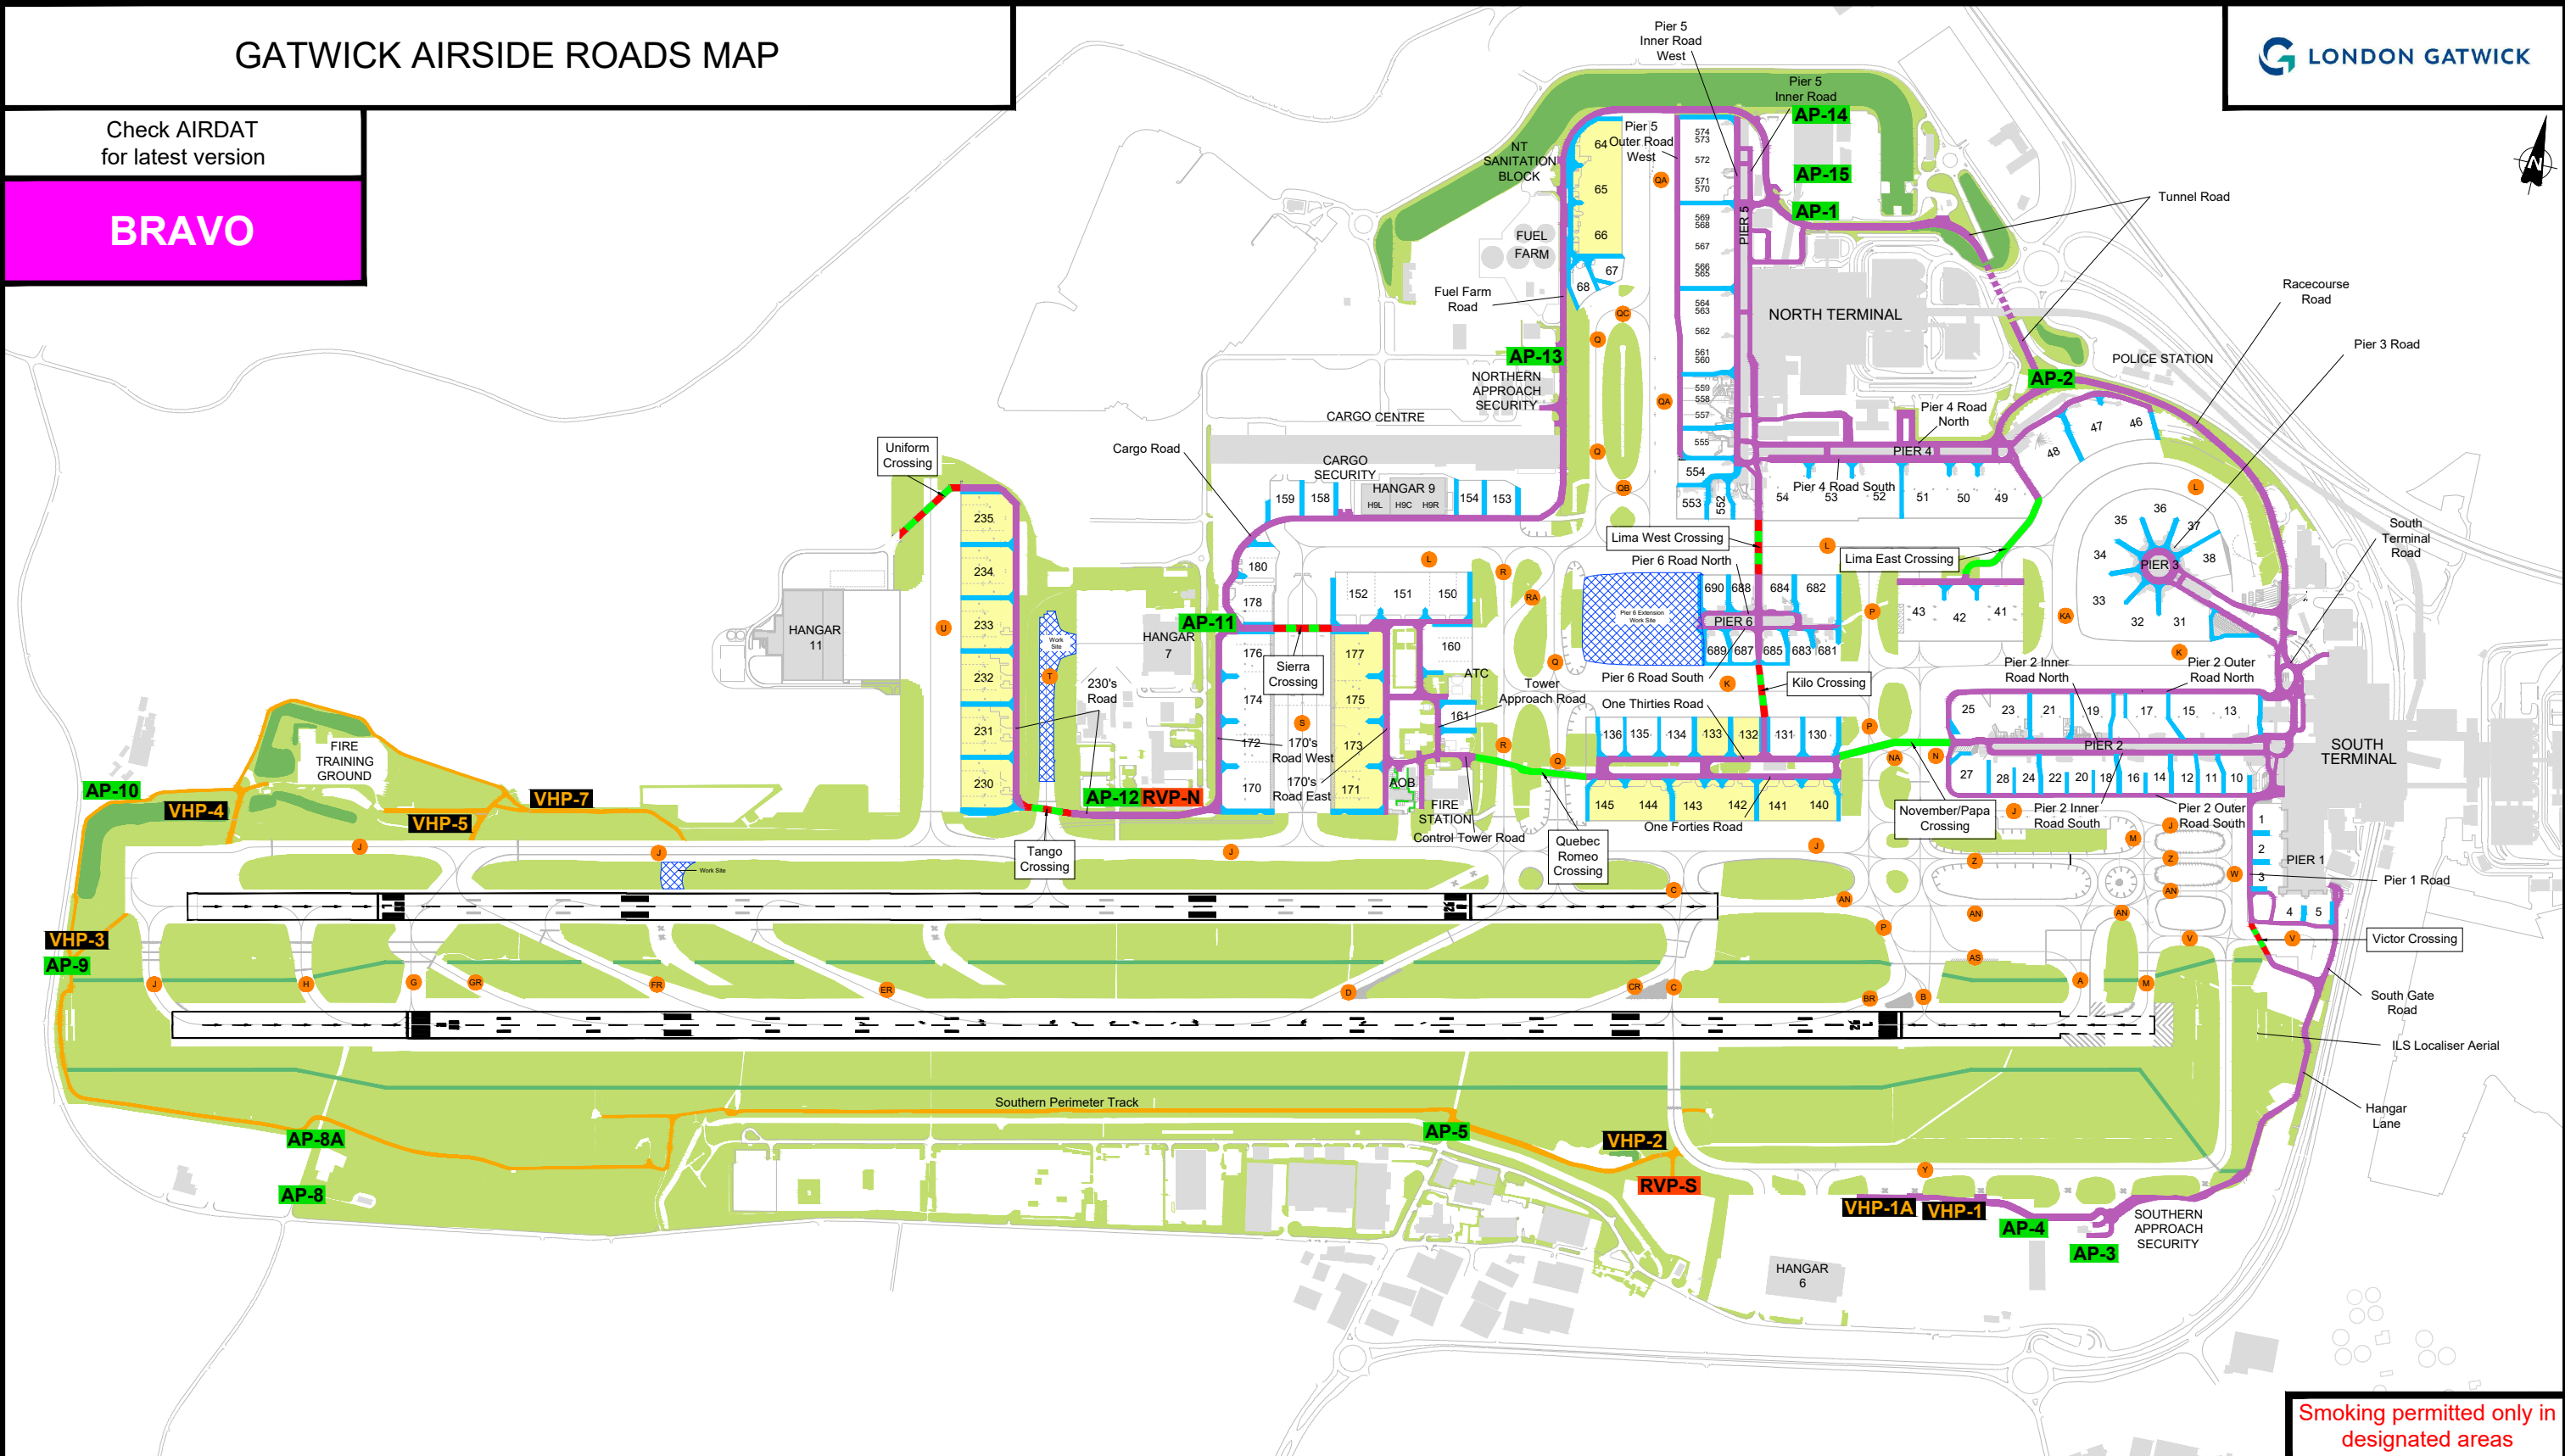

Check AIRDAT
for latest version

BRAVO



Smoking permitted only in
designated areas

Contact Telephone Numbers:	
Emergency	222 (from Stand telephone)
Emergency	01293 501222 (from a mobile)
ALL airside incidents must be reported via one of the above numbers	
Airfield Operations	3090 (from Stand telephone)
Airfield Operations	01293 503090 (from a mobile)
ATC	01293 601031
Engineering Faults	1111 (from Stand telephone)
Engineering Faults	01293 501111 (from a mobile)

ATC Radio Frequencies:	
Tower	124.230MHz
Ground	121.805MHz
Standby (As directed by ATC)	134.230MHz
All vehicles must maintain a Listening Watch with ATC whilst driving on the manoeuvring area	
Maximum Speed Limits:	
Airside Roads/Crossings	20 mph (or as locally signed)
Interstand Clearways	5 mph
Manoeuvring Area	40 mph

Key:		Aircraft Push & Hold Areas:	
		Local traffic restrictions may be in place. Drivers should exercise extra vigilance when driving in these locations	
	Airside (Service) Road		Interstand Clearway
	Taxiway Crossing - Controlled		Taxiway Crossing - Semi-Controlled
	Airfield Perimeter Track (Max. Speed 20mph) (Manoeuvring Area Licence Holders Only)		Taxiway Designation
	RVP-S		Access Point (AP)
	VHP-1		Vehicle Holding Point (VHP)