


GATWICK TUG CROSSING POINTS

(Not available for use during Low Visibility Operations)

Check AIRDAT
for latest version

BRAVO

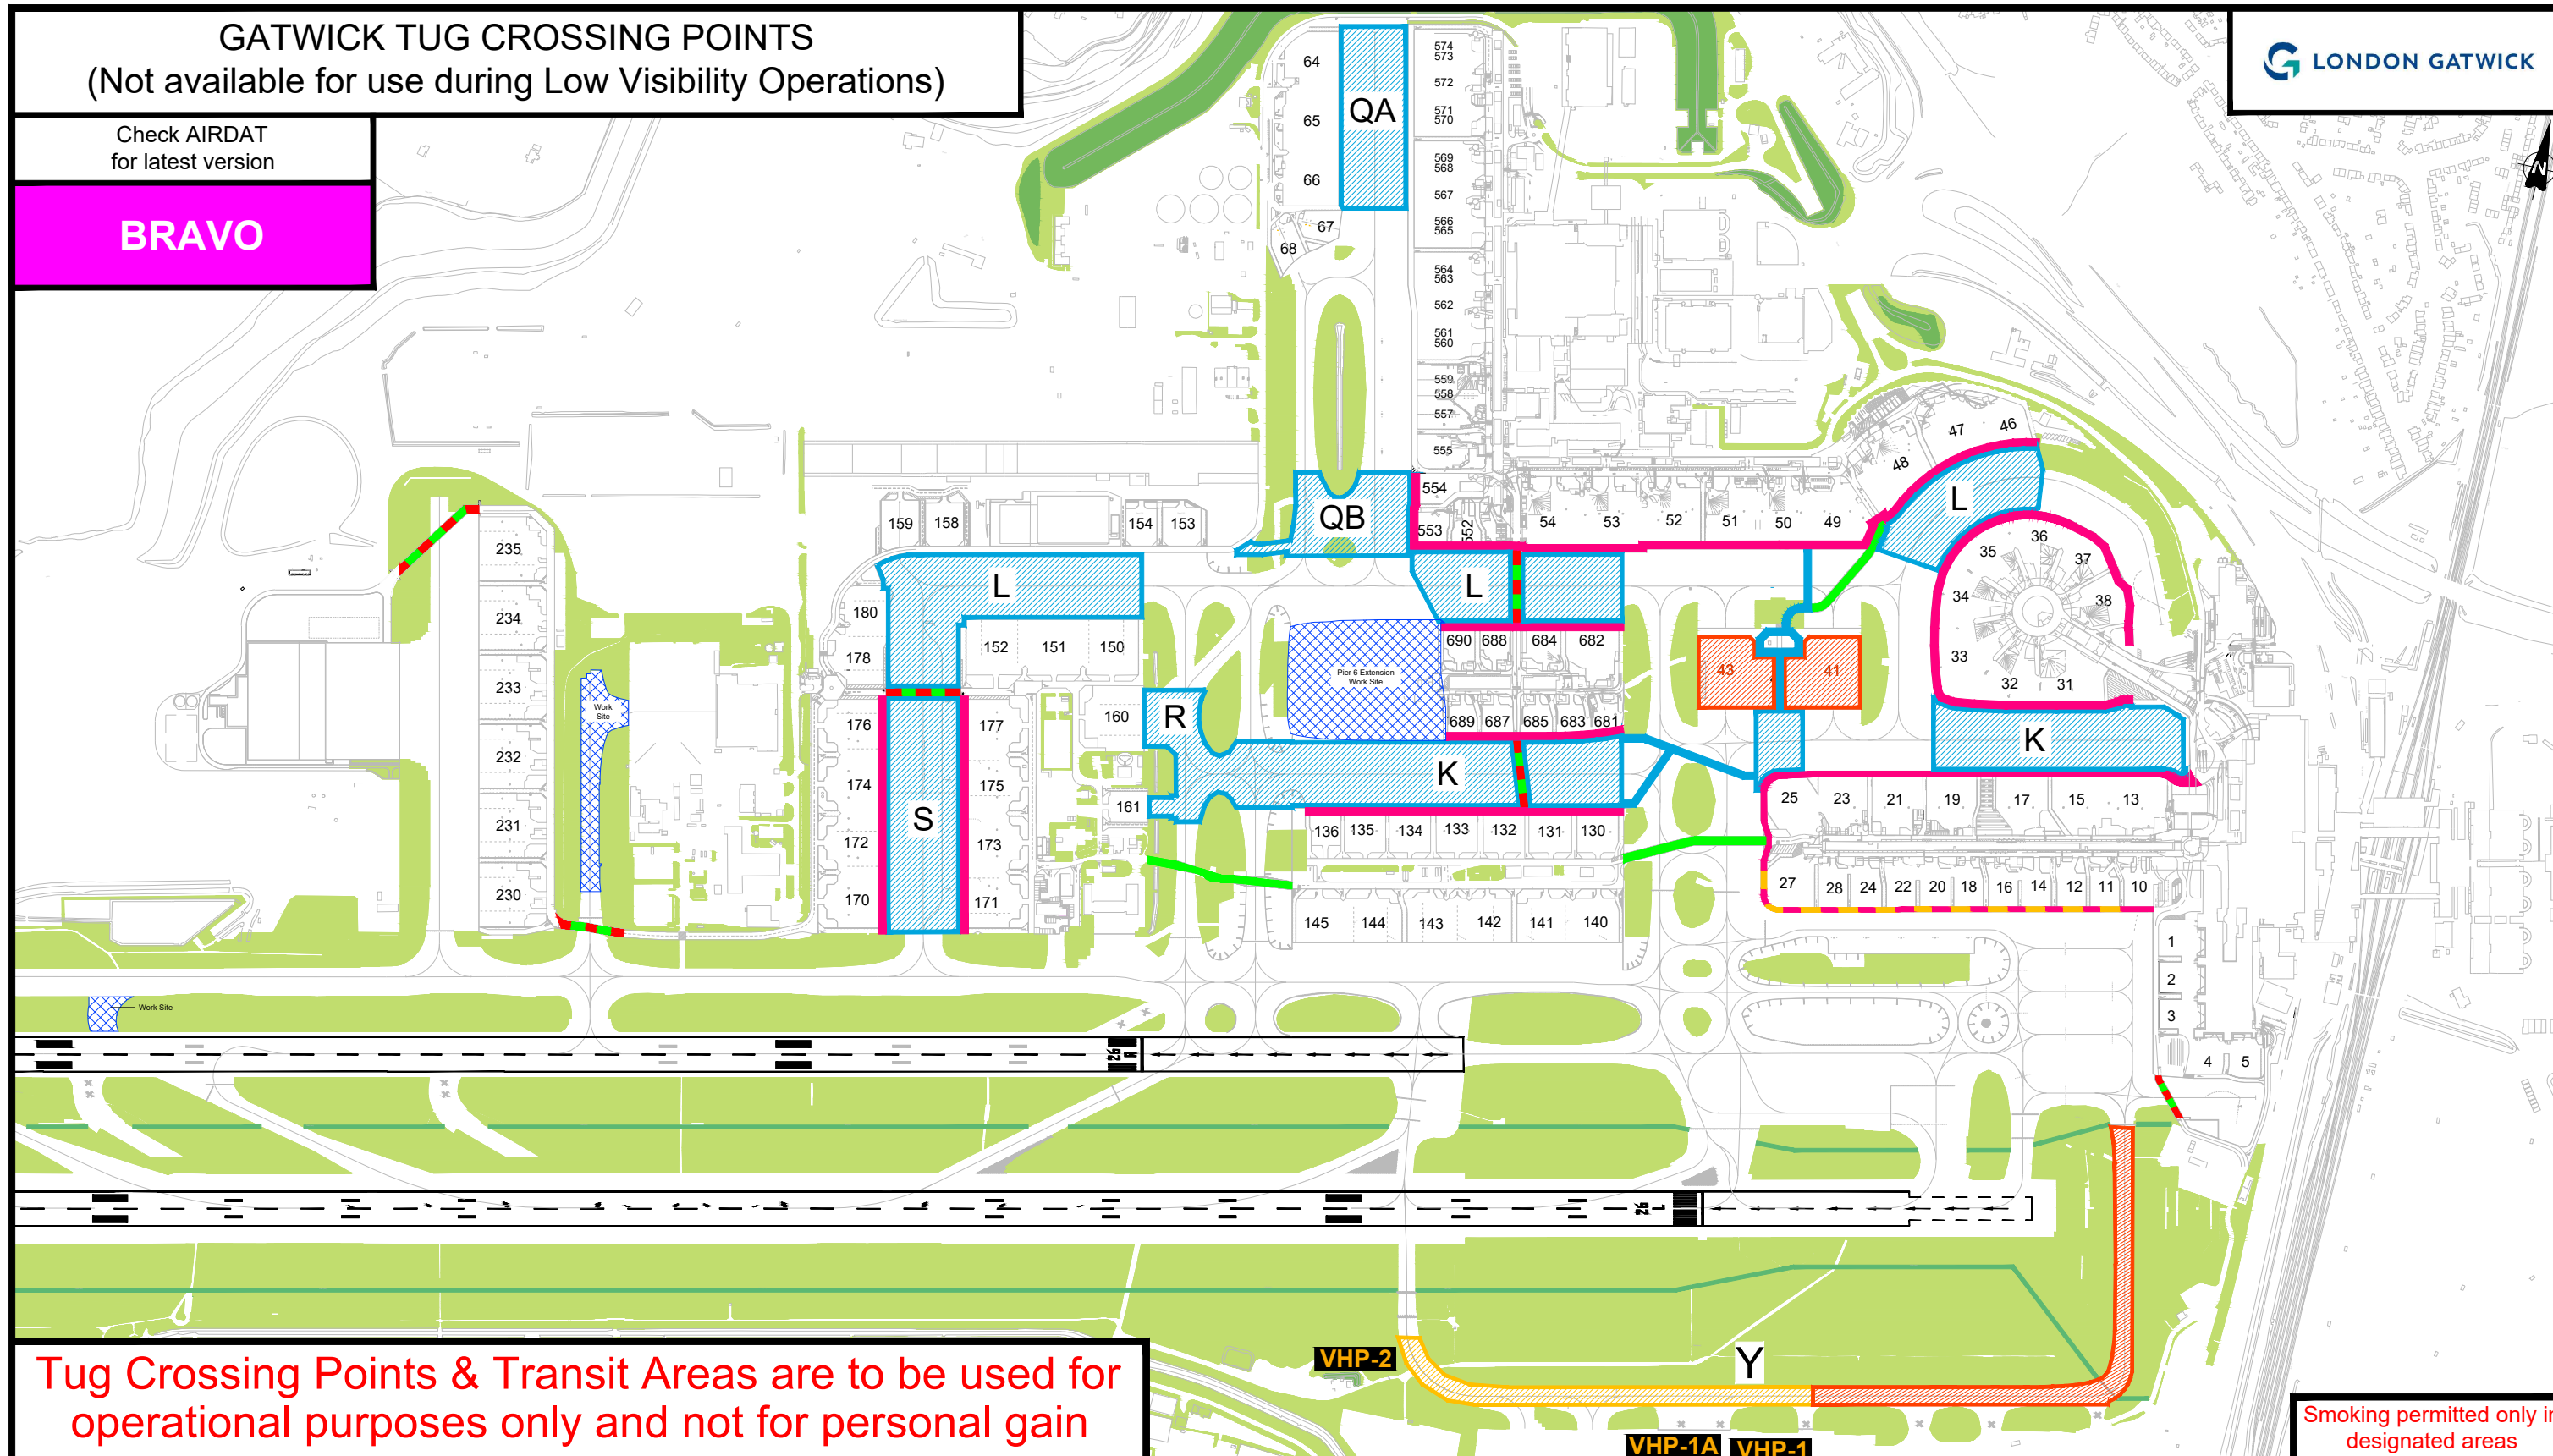

Tug Crossing Points & Transit Areas are to be used for operational purposes only and not for personal gain

Smoking permitted only in designated areas

Contact Telephone Numbers:

Emergency 222 (from Stand telephone)
Emergency 01293 501222 (from a mobile)

ALL airside incidents must be reported via one of the above numbers

Airfield Operations 3090 (from Stand telephone)
Airfield Operations 01293 503090 (from a mobile)
ATC 01293 601031
Engineering Faults 1111 (from Stand telephone)
Engineering Faults 01293 501111 (from a mobile)

ATC Radio Frequencies:

Tower 124.230MHz
Ground 121.805MHz
Standby (As directed by ATC) 134.230MHz

All vehicles must maintain a Listening Watch with ATC whilst driving on the manoeuvring area

Maximum Speed Limits:

Airside Roads/Crossings 20 mph (or as locally signed)
Interstand Clearways 5 mph
Manoeuvring Area 40 mph

Key:



No Free Ranging



Tug Crossing Areas



Tug Transit Areas



Tug Crossing Direct Routes



Tugs Permitted to cross the double white lines



Tugs permitted to cross the double white lines except in Northern Runway Operations



Taxiway Crossing - Controlled



Taxiway Crossing - Semi-Controlled



Vehicle Holding Point (VHP)