GATWICK AIRFIELD MAP
Block Diagram

LONDON GATWICK

Check AIRDAT
for latest version

BRAVO

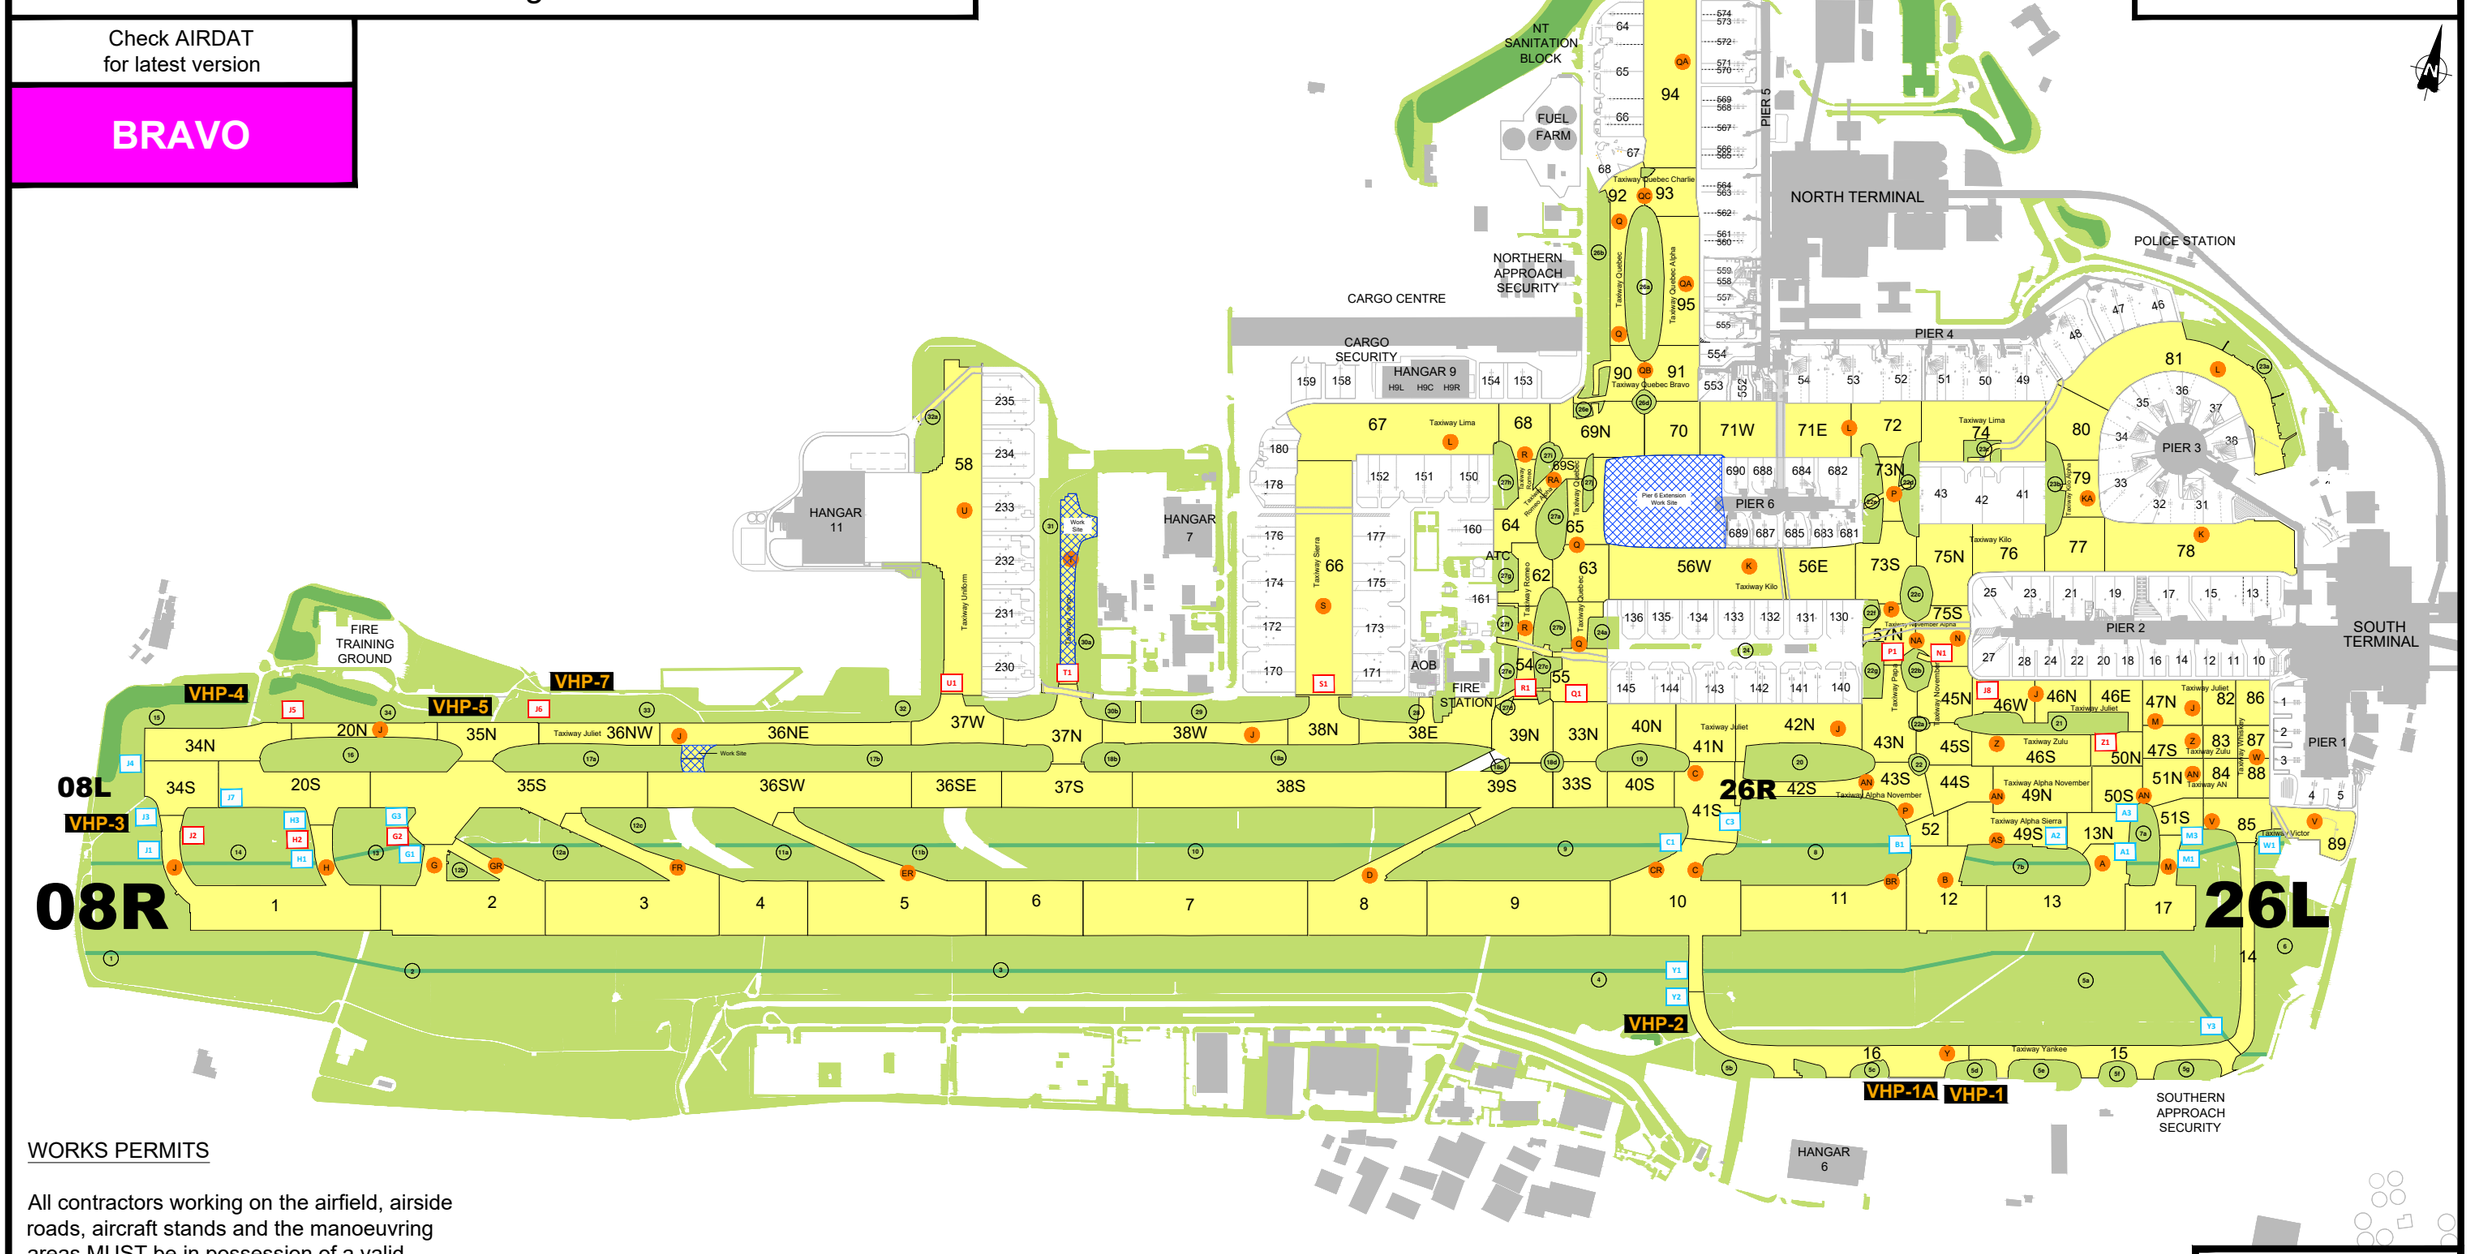

WORKS PERMITS

All contractors working on the airfield, airside roads, aircraft stands and the manoeuvring areas MUST be in possession of a valid works permit.

Smoking permitted only in designated areas

Contact Telephone Numbers:

Emergency	222 (from Stand telephone)
Emergency	01293 501222 (from a mobile)

ALL airside incidents must be reported via one of the above numbers

Airfield Operations	3090 (from Stand telephone)
Airfield Operations	01293 503090 (from a mobile)
ATC	01293 601031
Engineering Faults	1111 (from Stand telephone)
Engineering Faults	01293 501111 (from a mobile)

ATC Radio Frequencies:

Tower	124.230MHz
Ground	121.805MHz
Standby (As directed by ATC)	134.230MHz

All vehicles must maintain a Listening Watch with ATC whilst driving on the manoeuvring area

Maximum Speed Limits:

Airside Roads/Crossings	20 mph (or as locally signed)
Interstand Clearways	5 mph
Manoeuvring Area	40 mph

Key:

- A1 — Main Runway Holding Point
- N1 — Northern Runway Holding Point
- J — Taxiway Designation
- 21 — Grass Area Number
- VHP-1 — Vehicle Holding Point (VHP)